

DIMENSION HANDLEBAR INSTRUCTIONS

Thank you for purchasing Dimension Handlebars.

Dimension Handlebars are created with comfort, economy, and durability in mind.

⚠ WARNING: CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

For additional product and safety information go to:
www.dimensionbikeproducts.com/safety

COMPATIBILITY & INTENDED USE



Dimension handlebars are intended for use under the guidelines of ASTM Condition 2.

This is a set of conditions for the operation of a bicycle that includes Condition 1 (paved roads) as well as unpaved and gravel roads and trails with moderate grades. In this set of conditions, contact with irregular terrain and loss of tire contact with the ground may occur. Drops are intended to be limited to 15cm (6") or less.

For complete ASTM guidelines, please visit
dimensionbikeproducts.com/safety

⚠ WARNING

Dimension handlebars come in several clamp diameters (25.4, 26.0, and 31.8mm). Make certain that the stem clamp you use matches the marked size. Dimension does not recommend the use of clamp-on aero bars on Dimension flat or mountain handlebars

Mountain Bar Installation Instructions

We recommend that you have this product installed and maintained by a professional bicycle mechanic. Please read all instructions thoroughly before installing and using your new handlebar.

TOOLS

Allen wrenches: 4, 5 or 6mm

Torque wrench

Hacksaw (carbon-specific blade for carbon bars)

Cutting guide

File

CUTTING HANDLEBARS

1. When cutting handlebars, determine the appropriate width.
2. Remember to cut BOTH ends evenly.
3. Always use a cutting guide.
4. For carbon, use a carbon-specific blade.
5. File the handlebar ends to remove any burrs or sharp edges.

HANDLEBAR INSTALLATION

1. Remove the bolts from the stem faceplate.
2. Center the handlebar on the stem and replace the faceplate.
3. Tighten the faceplate bolts according to the stem manufacturer's specifications.

Road Bar Installation Instructions

We recommend that you have this product installed and maintained by a professional bicycle mechanic. Please read all instructions thoroughly before installing and using your new handlebar.

NOTE: Dimension Shallow Drop handlebars may be used with clamp-on aero bar extensions.

TOOLS

Allen wrenches: 4, 5 or 6mm

Torque wrench

HANDLEBAR INSTALLATION

1. Remove the bolts from the stem faceplate.
2. Center the handlebar on the stem and replace the faceplate.
3. Replace the stem faceplate bolts, but do not tighten fully.
4. Rotate the bars so that the straight portion of the drops is nearly parallel to the ground, or point slightly downward.
5. Tighten the faceplate bolts according to the stem manufacturer's specifications.

LIMITED 2-YEAR WARRANTY

Dimension warrants this new Dimension product against defects in materials and workmanship for two (2) years from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of Dimension, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the Dimension product and is not transferable.

In no event shall Dimension be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the Dimension product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended for or compatible with Dimension products

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

6400 WEST 105TH STREET
BLOOMINGTON, MN 55438

info@dimensionbikeproducts.com

1-855-883-6563

14294 06/15



DIMENSION
BICYCLE COMPONENTS