

DIMENSION SHORT DROP ROAD HANDLEBAR INSTRUCTIONS

Thank you for purchasing Dimension Handlebars.

Dimension Handlebars are created with comfort, economy, and durability in mind.

▲ WARNING: CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

For additional product and safety information go to:
www.dimensionbikeproducts.com/safety

COMPATIBILITY & INTENDED USE



Dimension short drop road handlebars with a 26.0 mm diameter are intended for use under the guidelines of ASTM Condition 2.

This is a set of conditions for the operation of a bicycle that includes Condition 1 (paved roads) as well as unpaved and gravel roads and trails with moderate grades. In this set of conditions, contact with irregular terrain and loss of tire contact with the ground may occur. Drops are intended to be limited to 15 cm (6") or less. For complete ASTM guidelines, please visit dimensionbikeproducts.com/safety.

Dimension short drop handlebars are compatible with aerobar extensions.

TOOLS

Allen wrenches: 4, 5, 6 mm

Torque wrench that measures in Newton meters

INSTALLATION

1. Remove the bolts from the stem faceplate.
2. Center the handlebar on the stem.
3. Lubricate the handlebar clamp bolts with grease.
4. Lightly clamp the handlebar face plate onto center of the handlebar, inserting and tightening both bolts just enough to hold the bar.
5. Center and rotate the handlebar to the desired position.
6. On a four-bolt face plate, alternately tighten the bolts to the stem manufacturer's torque specifications, working from the upper left, to the lower right, to the upper right, to the lower left in half turn increments until they reach an equal reading, or 5 to 8 Nm if manufacturer's specifications are not available. The upper and lower gaps between the front cap and the rear portion of the handlebar clamp should be equal.
7. Install shift and brake levers, handlebar tape or grips, as needed per manufacturer's instructions.
8. While straddling the toptube and holding the front wheel between your legs, make a strong attempt to rotate the handlebars up or down. If the bar rotates, increase the face plate bolt torque; do not exceed 8 Nm. If maximum torque has been reached and the bar still rotates, please take your bicycle to your local bicycle dealer for inspection of the handlebar/stem interface.
9. Check the tightness of the stem bolts before each ride.

LIMITED 2-YEAR WARRANTY

Dimension warrants this new Dimension product against defects in materials and workmanship for two (2) years from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of Dimension, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the Dimension product and is not transferable.

In no event shall Dimension be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the Dimension product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended for or compatible with Dimension products

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.